



“HOW TO”

REBOOT TYRO OR

TILL PAYMENTS EFTPOS MACHINES



“HOW TO” REBOOT TYRO OR TILL PAYMENTS DEVICES”

A "soft" reboot restarts the payments hardware and software, and will fix most common errors with your EFTPOS machines.

Tyro Terminal



1. Hold down the yellow “**CORR**” key until “**Reboot Now**” displays on the screen
2. Release the key and allow the EFTPOS machine to load the software
3. The EFTPOS machine will be fully rebooted & signed on when trading name displays on screen.

Till Payments Terminal



1. Hold down the “**YELLOW CLEAR**” + the “**FUNC**” button until **Restarting** displays on the screen
2. Release both keys and allow the EFTPOS machine to re-load the software
3. The EFTPOS machine will be fully rebooted and signed on when “**Till**” is displayed on screen.

Under both Tyro and Till Payments, exit BOSSII POS and reopen so BOSSII POS can re-link to the newly refreshed payments terminal